

Honda HRV 2022+ installation instruction

Note:

1. In order to ensure the safety and normal use of the product, please install it by professional staff, Do not disassemble the product without permission to avoid product damage and accidents.
2. Confirm the function display of the automobile instrument before loading. Whether the key operation in the car is normal, whether the lights are normal, or there is any scratch on the surface of the car, if there is any problem, pls communicate with the customer to confirm it in time.
3. Check whether the tail door is open/closed normally and deformed
4. Prepare relevant tools, close the vehicle, and ensure power off during installation.
5. All parts and screws of the original car removed during the installation shall be placed separately and labeled to prevent loss. Insulation shall be made at the wire junction to prevent short circuit
6. According to the wiring mode of our company, avoid affecting the moving parts of the car, such as steering wheel drive shaft, accelerator pedal, brake pedal and other vehicle control parts in the wiring process. The wire harness should be fixed during the straight process to prevent loose.
7. Do not insert or unplug the product or plug in the energized state to avoid damage to the head unit.





A:我司控制盒上电源插座

A. power to ECU box

B: 电源正级B+,保险取电

B.power B+,get 12V from FUSE BOX

C:接地

C:GND





1. Remove the hydraulic rod of the original car and install the electric strut of our company.



2. The ball heads at both ends of the electric pole are directly buckled on the original car bracket.



3. The seventh position from the bottom of the bar code indicates that the bar is left or right.



4. Remove the original tailgate trim.



5. The left and right sides are drilled with our drill bit for crossing the pole line.



6. Punch holes on both sides through the strut line.



拆下原车锁块,更换电吸锁,注意固定螺丝用原车螺丝

7. Remove the original car lock, replace our electric suction lock, pay attention to the need to use the original car screws fixed.



8. The original tailgate latch signal plug is pulled out and inserted with our special three-way plug.



9. A. The switch signal of the original car button hand is inserted into the three-way of our company.
- B. Electric suction lock plug.
- C. The original car lock plug is inserted with our special plug.



10. A.The red arrow shows the front switch/power cable routing diagram.

B.Location for Pillar B.



11. The thin yellow cable of the B-pillar plug is the central control release cable.



12. Location for Acc and B+.



13. Location for front switch.



14. Location for rear switch.



15. Press the unlock button three times to open or close the door.